

Restore In Style

Classic Switch Range



Polished Brass



Florentine Bronze



Chrome



Antique Brass



Satin Chrome

Five finishes available for all Series:

The finest selection of period switches and accessories.



100% Australian Made & Owned



10 SERIES

Bungalow / Tudor Switches & Accessories with Flat Plate Covers (67mm square base)

Accessories include:

- Plug Socket
- Dimmers & Fan Controllers
- Intermediate Switch
- 15amp Switch
- Bell Press
- TV & Pay TV Sockets
- Telephone & Data Sockets
- Clipsal C-Thru Range
- Mounting Blocks



20 SERIES

Porcelain Base Switches & Accessories with Fluted Screw on Covers (58mm base) IVORY or BLACK Porcelain

Accessories include:

- Dimmers & Fan Controllers
- Intermediate Switch
- 15amp Switch
- Bell Press
- Clipsal C-Thru Range
- Mounting Blocks



30 SERIES

Porcelain Base Switches & Accessories with Smooth Screw on Covers (58mm base) IVORY or BLACK Porcelain

Accessories include:

- Dimmers & Fan Controllers
- Intermediate Switch
- 15amp Switch
- Bell Press
- Clipsal C-Thru Range
- Mounting Blocks

Grid assemblies (31GA) required for following accessories

- TV & Pay TV Sockets
- Telephone & Data Sockets
- 35 amp Oven Switch



45 SERIES

Switches & Accessories with Deep Fluted Push on Covers (53mm base)

Accessories include:

- Dimmers & Fan Controllers
- Intermediate Switch
- Bakelite inner Switch
- 15amp Switch
- Bell Press
- TV & Pay TV Sockets
- Telephone & Data Sockets
- Clipsal C-Thru Range
- Mounting Blocks



 
10BT 10TV 10PH1 10DIMBL 10SKT W
10FBT 10TV FB 10PH1 FB 10DIMGR FB 10SKT B FB
10CHT 10TV CH 10PH5 CH 10FC CH 10SKT W CH
10ABT 10TV AB 10PH6 AB 10FC/3SP AB 10SKT B AB




20I 20I BP 20I INT 23BL I 2FC I
20B FB 20B BP FB 20B INT FB 23GR B FB 2FC/3SP B FB
20I CH 20I BP CH 20I INT CH 23BL I CH 2FC I CH
20B AB 20B BP AB 20B INT AB 23GR B AB 2FC/3SP B AB



30I 30I INT 33GR I 3FC/3SP I 31GAI/PH1
30B(P) FB 30B INT FB 33BL B FB 3FC B FB 31GAB FB 35 AMP OVEN
30I CH 30I INT CH 33GR I CH 3FC/3SP I CH 31GAI/46W CH
30B AB 30B INT AB 33BL B AB 3FC B AB 31GAB/TV AB

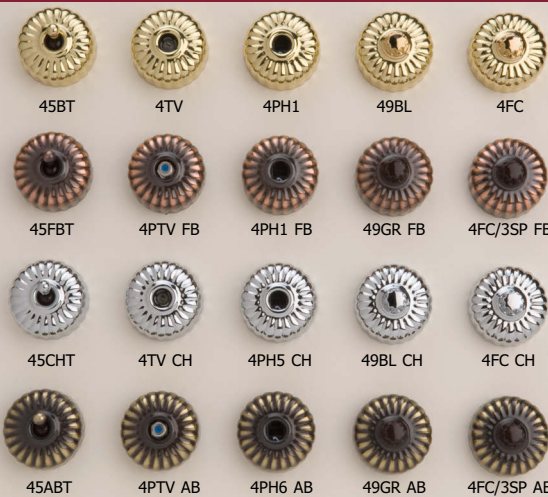

 45BT 4TV 4PH1 49BL 4FC
45FBT 4PTV FB 4PH1 FB 49GR FB 4FC/3SP FB
45CHT 4TV CH 4PH5 CH 49BL CH 4FC CH
45ABT 4PTV AB 4PH6 AB 49GR AB 4FC/3SP AB

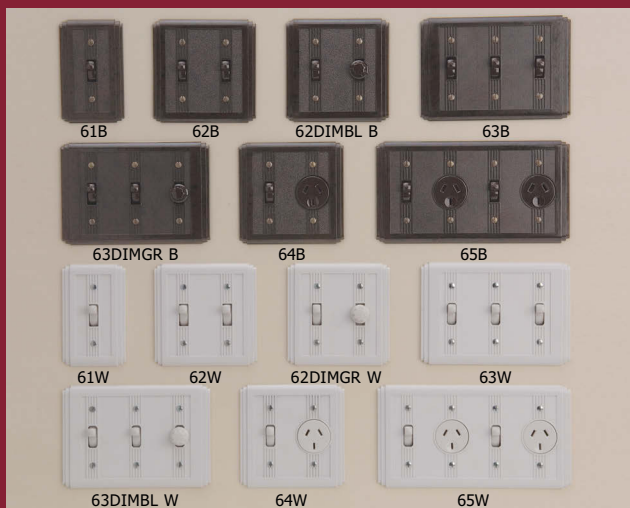

55 SERIES

Switches & Accessories with Deep Smooth Push on Covers (53mm base)

Accessories include:

- Dimmers & Fan Controllers
- Intermediate Switch
- Bakelite inner Switch
- 15amp Switch
- Bell Press
- TV & Pay TV Sockets
- Telephone & Data Sockets
- Clipsal C-Thru Range
- Mounting Blocks



56 & 58 SERIES

Plug Sockets and Ceiling Pull Switches

The **56 series** plug sockets are available with a **BROWN** or **WHITE** insert. Five solid metal covers for you to choose from. 15 amp inserts are available.

The **58 series** Ceiling Pull switch is available with a **BROWN** or **WHITE** cord. Five solid metal covers for you to choose from. Solid brass cord weight available. Standard cord length is 1.8m, (longer lengths are available).



60 SERIES

Art Deco Bakelite Switches & Accessories

Available in **BROWN** or **WHITE**

Accessories include:

- Plug Sockets
- Dimmers & Fan Controllers
- 15amp Switch
- 60mm wide Single Switch
- TV & Pay TV Sockets
- Telephone & Data Sockets
- Clipsal C-Thru Range
- Mounting Bracket Kits for plasterboard
- Wall Boxes for masonry mounting



BAKE SERIES

Bakelite Switches & Accessories

Available in **BROWN** or **WHITE**

Accessories include:

- Plug Sockets
- 15 amp Sockets
- Dimmers & Fan Controllers
- 15amp switch
- TV & Pay TV Sockets
- Telephone & Data Sockets
- Clipsal C-Thru Range
- Mounting Blocks



BAKELITE ACCESSORIES

 


COOLIE SHADES



REPLACEMENT PARTS

CLIPSAL C-THRU RANGE

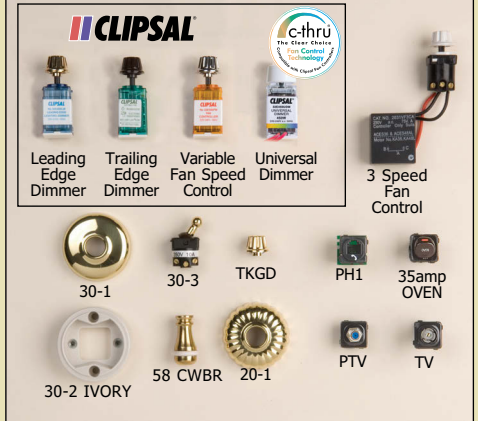


CLASSIC MOUNTING BLOCKS




TRADITIONAL MOUNTING BLOCKS



 BUNGALOW MOUNTING BLOCKS

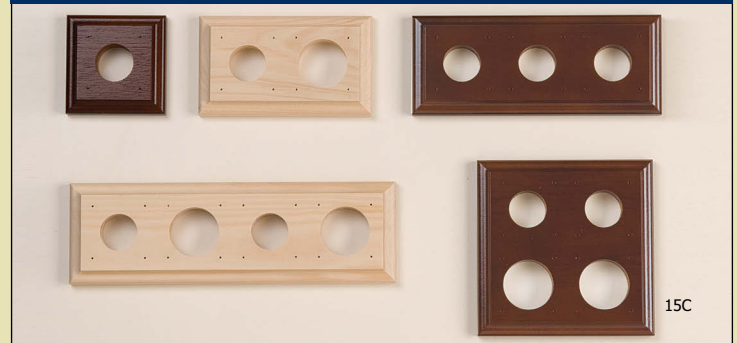

HOOB BOARDS

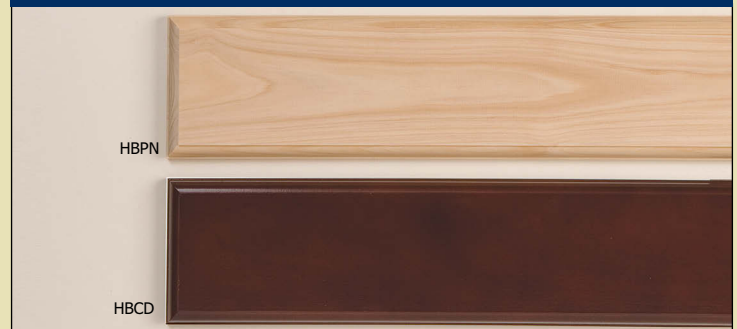 

Restore In Style

61 Euston Road Toowoomba QLD 4350

07 46301232

www.restoreinstyle.com